Installation of the in-line fuse - for the instrument LED lights





The fuse will be connected between the switch and the black-blue wire, connector No. 58a.

The easiest way is to remove the light switch.

To check which of the 2 wires go to the Gauge lights, unplug each one and check by which wire the instrument lights are off. Connect the fuse between that wire and the switch.

Disclaimer:

The correct installation of the fuse is your responsibility. I cannot take any responsibility for any damage to your vehicle or equipment.